

If you are unable to enter the WiFi password into the reader through a USB flash drive, try the T9 Input to type in the password. Make sure to follow the directions carefully.

From the reader, select the **Menu/Enter Key ( M/↵ )** After highlighting each selection, press the **M** key to confirm.

**Comm → Wireless → Choose your Wifi network.**

From there, you will see the **Password Setup** screen. Make sure you see the cursor flashing in the password bar.

**Letters:**

To access letters, hit the **right arrow** key. The bottom of the screen will have a blue bar showing **[English]** and that is where we will enter letters.

Letter Key

a - 2, 0	n - 6, 1	A - 2, 3	N - 6, 4
b - 2, 1	o - 6, 2	B - 2, 4	O - 6, 5
c - 2, 2	p - 7, 0	C - 2, 5	P - 7, 4
d - 3, 0	q - 7, 1	D - 3, 3	Q - 7, 5
e - 3, 1	r - 7, 2	E - 3, 4	R - 7, 6
f - 3, 2	s - 7, 3	F - 3, 5	S - 7, 7
g - 4, 0	t - 8, 0	G - 4, 3	T - 8, 3
h - 4, 1	u - 8, 1	H - 4, 4	U - 8, 4
i - 4, 2	v - 8, 2	I - 4, 5	V - 8, 5
j - 5, 0	w - 9, 0	J - 5, 3	W - 9, 4
k - 5, 1	x - 9, 1	K - 5, 4	X - 9, 5
l - 5, 2	y - 9, 2	L - 5, 5	Y - 9, 6
m - 6, 0	z - 9, 3	M - 6, 3	Z - 9, 7

**Symbols:** To access symbols, hit the right arrow key until the blue bar on the bottom shows **[symbol]**. On the far right of the symbol selections, there is a ">" indicating more symbols to choose from. Use the **up and down arrow** keys to access more symbols. When you see the desired symbol, select the number to the left of the symbol to input into the password bar. Press the **right arrow** key again to select **[English]** to input letters.

**Numbers:** If you see the blue bar located at the bottom of the screen indicating **[English]** or **[symbol]**, simply hit **ESC** on the keypad to access number input.