

Internal Bell

 
US10 Models

Click Enter/M to go to the Menu

System > Bell



Click Enter to add a new bell or edit an existing bell

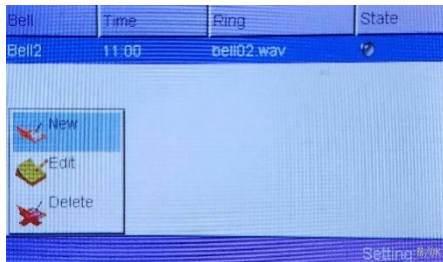

Enter the desired time, sound, volume, amount of times to repeat the sound, and days of the week.

Set State to "ON."

 
Arrow down to "OK" and click Enter to save.




US15 Models

Click Enter/M to go to the Menu


Personalize > Bell Schedules

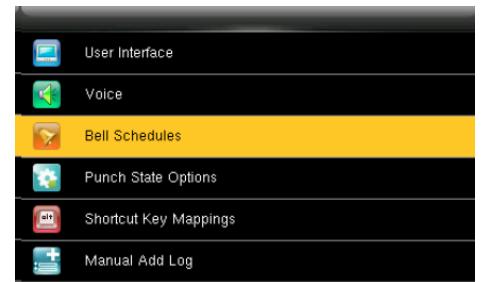

New Bell Schedule

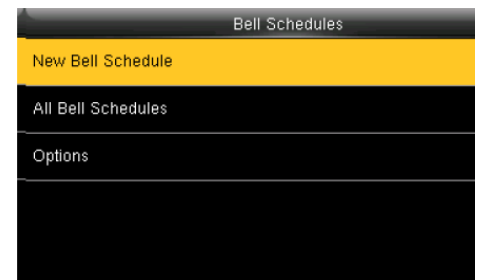 

 From this menu, you can turn the bell on, set the time schedule, and other settings.

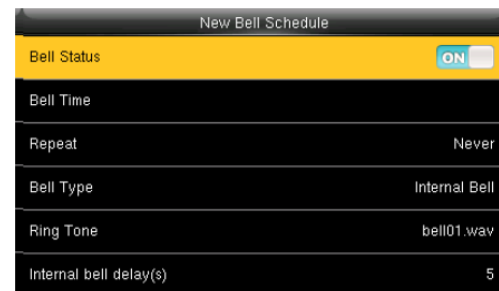

External Bell



US10 Models

Set the volume to 0%. This will mute the internal bell so that only the external bell will sound.



US15 Models

Make sure to set the "Bell Type" to External Bell (or Internal and External Bell).

